


Z-WAVE INDOOR SIREN

ZOOZ™
bright ideas

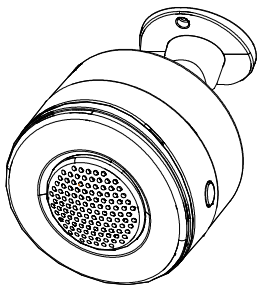

ZSE01



Z-Wave Certified Device
GR-304N

2

WARRANTY

This Limited Warranty applies to physical goods, and only for physical goods, purchased from Zooz (the "Physical Goods").

What does this limited warranty cover?

This Limited Warranty covers any defects in material or workmanship under normal use according to instructions from the User Manual during the Warranty Period. Warranty coverage applies to purchases made from authorized dealers only. See full list of Zooz distributors here: myzooz.com/buy. During the Warranty Period, Zooz will repair or replace, at no charge, products or parts of a product that prove defective because of improper material or workmanship, under normal use and recommended maintenance. Zooz does not assume the cost of return shipping for warranty service.

How long does the coverage last?

The Warranty Period for Physical Goods purchased from Zooz is 12 months from the date you purchased this product.

What does this limited warranty not cover?

This Limited Warranty does not cover any problem that is caused by:

- conditions, malfunctions or damage not resulting from defects in material or workmanship
- improper handling or installation of the product

The warranty does not cover purchases from unauthorized dealers or second-hand sources. The warranty does not cover return shipping cost for warranty service.

What do you have to do?

To obtain warranty service, please contact us to determine the problem and offer a quick solution for you: warranty@myzooz.com

3

You may also get in touch with a reseller of the product directly to return or replace the product within 30 days of purchase.

IN NO EVENT SHALL ZOOZ OR ITS SUBSIDIARIES AND AFFILIATES BE LIABLE FOR ANY INDIRECT, INCIDENTAL, PUNITIVE, SPECIAL, OR CONSEQUENTIAL DAMAGES, OR DAMAGES FOR LOSS OF PROFITS, REVENUE, OR USE INCURRED BY CUSTOMER OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT, OR OTHERWISE EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

ZOOZ'S LIABILITY AND CUSTOMER'S EXCLUSIVE REMEDY FOR ANY CAUSE OF ACTION ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF THE PRODUCTS, WHETHER BASED ON NEGLIGENCE, STRICT LIABILITY, BREACH OF WARRANTY, BREACH OF AGREEMENT, OR EQUITABLE PRINCIPLES, IS EXPRESSLY LIMITED TO, AT ZOOZ'S OPTION, REPLACEMENT OF, OR REPAYMENT OF THE PURCHASE PRICE FOR THAT PORTION OF PRODUCTS WITH RESPECT TO WHICH DAMAGES ARE CLAIMED.

ALL CLAIMS OF ANY KIND ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF PRODUCTS SHALL BE DEEMED WAIVED UNLESS MADE IN WRITING WITHIN THIRTY (30) DAYS FROM ZOOZ'S DELIVERY, OR THE DATE FIXED FOR DELIVERY IN THE EVENT OF NONDELIVERY.

FCC NOTE

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

STORE INDOORS WHEN NOT IN USE. SUITABLE FOR DRY LOCATIONS ONLY. DO NOT IMMERSIVE IN WATER. NOT FOR USE WHERE DIRECTLY EXPOSED TO WATER.

4

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference,
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used according to instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in any given installation.

If this equipment causes harmful interference to radio or television reception, the user may try to correct the interference by taking one or more of the following measures:

- Reorient or relocate receiving antenna
- Increase the separation between equipment and receiver
- Connect equipment into a separate outlet or circuit from receiver
- Consult the dealer or an experienced radio/TV technician for additional assistance

All brand names displayed are trademarks of their respective holders.
[c] Zooz 2015



5

WELL DONE!

You have picked the finest solution for your smart home, congrats!

Now it's time to enjoy these great features of your new product:

- Audible and visual alarm
- Wireless control, notifications, and trigger by other smart home devices (when included to a Z-Wave gateway controller)
- Z-Wave Plus with improved 500 chip for faster and safer wireless communication
- Acts as signal repeater when powered by AC adapter
- Sleek design and compact size

SPECIFICATIONS

Model Number: ZSE01

Z-Wave Signal Frequency: 908.42 MHz

Volume: 110dB

Power: DC 5V/1A and 4 AAA (1.2V) batteries for back-up power

Range: Up to 100 feet line of sight

Operating Temperature: 14 °F to 122 °F

Operating Humidity: ≤ 80%

Installation and Use: Indoor only

BEFORE YOU RETURN IT

Let us know if you are having any issues installing or operating the device.

Our fast and friendly tech support is here to help, every day of the year:

ask@myzooz.com

Go to myzooz.com to find out how to make your home smarter and safer.

6

WARNING

- This product should be installed indoors upon completion of any renovations
- Prior to installation, the device should be stored in a dry, dust- and mold-proof place
- Do not install the siren in a place with direct sun exposure, high temperature or humidity- Keep away from chemicals, water, and dust
- Ensure the device is never close to any heat source or open flame to prevent fire
- Ensure the device is connected to an electric power source that does not exceed the maximum load power
- The batteries are only a backup power source and are not recommended for use as the main power supply
- No part of the device may be replaced or repaired by the user (except batteries)

INSTALLATION

WAIT!

Include the indoor siren to your Z-Wave network before mounting it.

Z-WAVE INCLUSION

1. Bring the siren within 3 feet from your Z-Wave gateway controller
2. Put your Z-Wave controller in inclusion/pairing mode
3. Press and release the Z-Wave button on the siren THREE TIMES quickly
4. A new alarm device should appear on your controller's device list


Q: I have not been able to add the device to my network after several attempts, what do I do now?

A: If you are unable to include the Z-Wave switch to your controller, please try one of the following:

7

- Bring the siren closer to your Z-Wave controller
- Press and release the Z-Wave button quickly several times once you put the controller in the inclusion mode to ensure the command has gone through
- Put your controller in the EXCLUSION mode and press and release the Z-Wave button quickly 3 times, then try adding it to your network again

Z-WAVE BUTTON

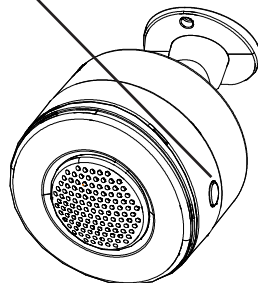

8

Z-WAVE EXCLUSION

1. Bring the siren within 3 feet from your Z-Wave gateway controller
 2. Put your Z-Wave controller in exclusion/unpairing mode
 3. Press and release the Z-Wave button on the siren THREE TIMES quickly
 4. The device should disappear from your controller's device list
- Please repeat the process following all steps carefully if first attempt is unsuccessful.

Z-Wave Automation and Advanced Functionality:

Once the Z-Wave siren is added to your network, you are able to trigger it with other components from your network, as well as control and monitor its activity from your mobile device, or computer.

Depending on your Z-Wave gateway's home automation software capabilities, you may be able to associate your indoor siren in groups with other Z-Wave devices to schedule scenes and create events.

Please refer to your controller's user guide for advanced programming instructions as they are a little different for every software.

MOUNTING

Find the best spot for your Z-Wave indoor siren - a corner in the living room, garage ceiling, or anywhere else you see fit. Use the 2 screws included in the box to fix the mounting bracket to flat surface of your choice.

Once the bracket is securely installed, carefully slide the siren onto the bracket and position it by tilting it to either side, upwards, or downwards.